



## ColdSnap Instructions



**STORAGE:** Storage at the preconditioning temperature is recommended.

**ACTIVATION AND APPLICATION:** Prior to use, pre-condition the ColdSnap for a minimum of 10 minutes at a temperature at least 10°C above the activation temperature for *descending* models - **or** - 10°C below the activation temperature for *ascending* models.

Pull the plastic arming tab straight out - do not break off. Install immediately to your pre-conditioned goods. Failure to do this may result in a premature readout.

**INDICATION:** The ColdSnap will turn from clear to bright red when the rated temperature has been breached.